

LED/LCD TELEVISION

Instruction Manual

Model:

 
LED19JHRHU

LED22JFRHU

IMPORTANT NOTE:

Thank you for selecting a TECO quality LED/LCD television. Read this manual carefully before installing or operating your new television. Make sure to save this manual for future reference.

The design and specifications are subject to change without prior notice for product improvement. Consult the sales agents or manufacturer for details.

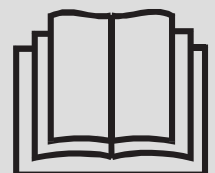

Contents

Safety Precautions	4
Overview (Front View)	9
Overview (Back View) / Accessories	10
Remote Control	11
Basic Operation	13
OSD Menu	
1. CHANNEL Menu	14
2. PICTURE Menu	16
3. SOUND Menu	16
4. TIME Menu	17
5. LOCK Menu	17
6. SETUP Menu	18
Multimedia Operation	19
Recording Operation	22
Troubleshooting.....	23
Specifications	24

Safety Precautions

Preface

 
 
About This Manual

Thank you for purchasing TECO LED/LCD colour television (LED stands for Light-Emitting Diode, LCD stands for Liquid Crystal Display). We are pleased to present a product that has been designed with excellent quality, reliability and performance to make your viewing experience more satisfying than ever before. This manual provides detailed descriptions on how to use this product and making adjustments according to your personal preferences.

The illustrations in this Instruction Manual are provided for reference only and may differ from the actual product appearance.

Please read the Safety Precautions and the instructions in this manual carefully, and keep them handy, for your future reference.

Safety Information

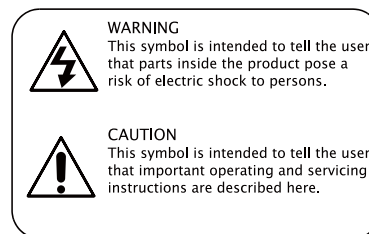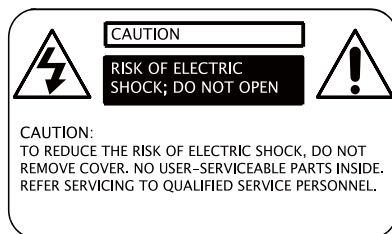

Product Disposal

Do not dispose of the LED/LCD television with general household waste. The LED/LCD screen contains a small amount of liquid crystal and mercury. For disposal or recycling information, please contact your local authorities.

Safety Precautions

Please read all of these instructions before you operate your television and save these instructions for later use. This unit has been engineered and manufactured to ensure your personal safety, however, improper use can result in electric shock or fire hazard. In order not to defeat the safeguards incorporated in this equipment, please observe the following basic rules for its installation, use and servicing.

Safety Precautions

Safety Information

- Always, unplug this LED/LCD television from the wall outlet before cleaning.
- Do not use liquid cleaners or aerosol cleaners. Use a soft cloth moistened with water for cleaning.
- Use only the attachments recommended by the television equipment manufacturer.
- Do not use this LED/LCD television near water, for example, near a bath tub, washbowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool.
- Do not place this LED/LCD television on an unstable surface, stand, or cart. The LED/LCD television may fall, causing serious injury to a child or an adult, and seriously damage the equipment.
- When moving the LED/LCD television, hold it under the main unit. Do not grab the base when moving. The base could come off, causing you to drop the LED/LCD television, possibly resulting in damage to the LED/LCD television or causing injury.
- The LED/LCD television should be moved with care. Quick stops, and uneven surfaces when transporting may lead to damage the LED/LCD television.
- Slots and openings in the back or bottom of the cabinet are provided for ventilation. To ensure reliable operation of the LED/LCD television and to protect it from overheating, these openings must not be blocked or covered. This LED/LCD television should not be placed in an enclosed installation such as a bookcase unless proper ventilation is provided.
- The openings should never be covered with a cloth or other material, and the bottom openings should not be blocked.
- This LED/LCD television should be operated only from a power source indicated on the marking label.
- Do not allow anything to rest on the power cord. Do not locate the LED/LCD television where the cord may be damaged due to lightning and power-line surges.
- Follow all warnings and instructions marked on the LED/LCD television.
- If an outdoor antenna is connected to the LED/LCD television, be sure the antenna system is earthed so as to provide some protection against voltage surges and static charges.
- For added protection for this LED/LCD television during a lightning storm, or when it is left unattended and unused for long period of time, unplug it from the wall outlet and disconnect the antenna. This will prevent damage to the equipment due to lightning and power-line surges.
- This LED/LCD television is for indoor use only.

Safety Precautions

Safety Information

- An outdoor antenna system should not be located in the vicinity of over head power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outdoor antenna system, extreme care should be taken to keep from touching such power lines or circuits as contacting with them could be fatal.
- Do not overload wall outlets and extension cords as this can result in fire or electric shock.
- Never push any kind of objects into this LED/LCD television through cabinet slots as they may touch dangerous voltage points or result in short-circuits of internal parts. This could result in a fire or electric shock. Never spill any kind of liquid on the LED/LCD television.
- Do not attempt to service the LED/LCD television by yourself because opening or removing covers may expose you to dangerous voltage or other hazard. Refer all servicing to qualified service personnel.
- Unplug this LED/LCD television from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - When the power cord or plug is damaged or frayed.
 - If liquid has been spilled into the LED/LCD television.
 - If the LED/LCD television does not operate according to the operating instructions, please adjust those items that are covered by the operating instruction because improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the LED/LCD television to normal state.
 - If the LED/LCD television has been dropped or damaged.
 - When the television comes about a distinct change in performance -this maybe indicates the need of servicing.
- After the servicing of the LED/LCD television, please ask the service technician to perform routine safety checks to determine that the television is in safe operating condition.
- If needing to replace parts, please make sure that the replaced parts that the service technician adapts are specified by the manufacturer and have the same characteristics as the original parts. Unauthorized substitutions may result in fire, electric shock, or other hazards.
- Note to CATV system installer: the note reminds the CATV system installers that the cable earth should be connected to the earthing system of the building as close to the point of cable entry practical as possible.
- Wall mounting should follow the manufacturer instructions, and should use a mounting kit approved by the manufacturer

Safety Precautions

Safety Information

- The LED/LCD television should not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the LED/LCD television.
- A warning that excessive sound pressure from earphone and headphones can cause hearing loss.

CAUTION: If the set is not going to be used for a long period, such as during a vacation, remove the plug from the wall outlet to economise power.
(If the TV set is plugged in, a slight current still flows, even if the power button is in the OFF position)

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Handling The LED/LCD Screen

- Direct sunlight on the LED/LCD screen can cause damage to the screen. Take care when you are placing the television near a window.
- Do not push or scratch the LED/LCD screen. Do not place heavy objects on the LED/LCD screen. This may cause the screen to lose conformity or cause LED/LCD panel to malfunction.
- If the TV is used in a cold place, fuzzy image may appear on the screen. This is not a malfunction. The screen will be normal as its temperature rises to the normal operating level.
- If a still picture is displayed for a long period of time on the television screen, ghosting may occur for a while. The ghosting will eventually disappear.
- Displaying a static image for a long period of time on the television screen may cause burn in.
- If the LED/LCD panel becomes warm during operation, this is normal and not a malfunction.

Safety Precautions

Handling Of Broken Glass And Liquid Crystal Leakage

If the LED/LCD panel is damaged, crystalline liquid leakage may occur, or scattered broken glass may result. Do not touch broken glass or crystalline liquid (which is toxic) with bare hands that have cuts or skin irritation as poisoning may result. If any crystalline liquid gets into mouth or eyes, rinse thoroughly with clean water and consult your doctor.

Important Information

 
If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television
- Only using furniture that can safely support the television
- Ensuring the television is not overhanging the edge of the supporting furniture
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support
- Not standing the televisions on cloth or other materials placed between the television and supporting furniture
- Educating children about the dangers of climbing on furniture to reach the television or its controls.

Overview


Front View

LED19JHRHU

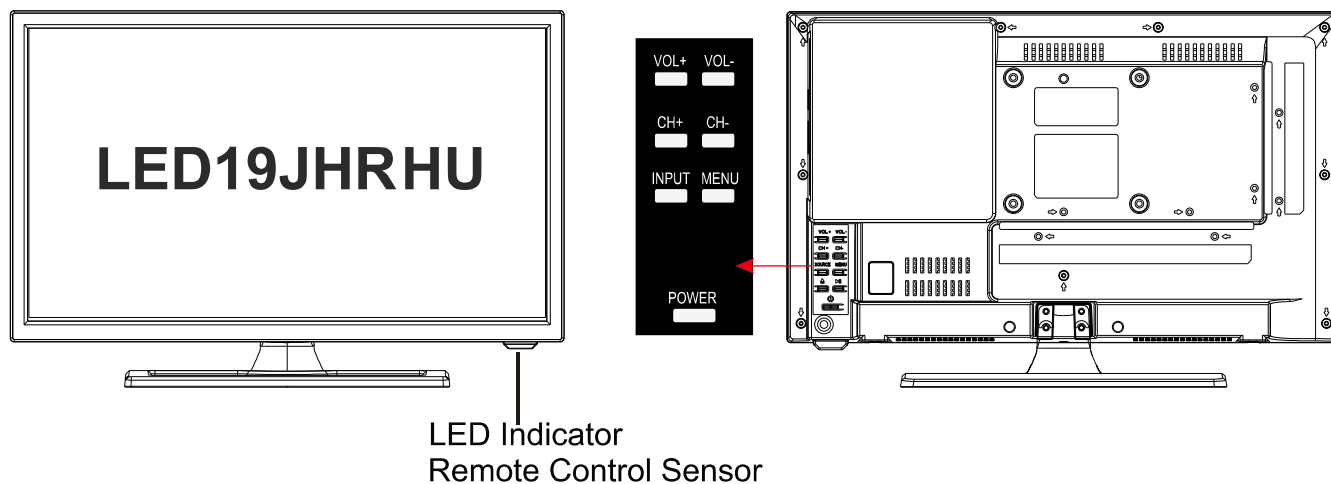

Front View

 LED22JFRHU

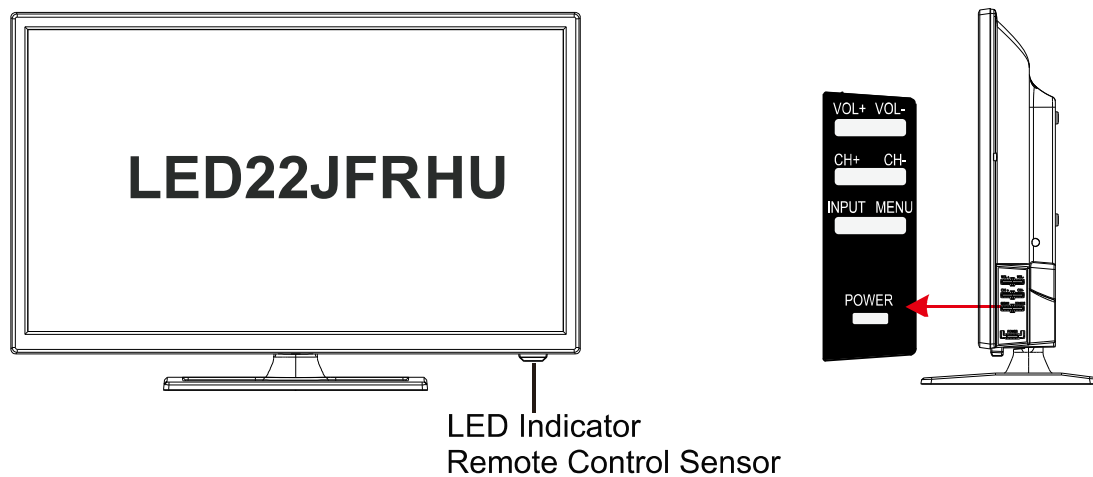

POWER: Turn on/standby the TV set.

INPUT: Display the input source menu.

 
MENU: Display/exit the OSD menu.

CH+/-: Scan through channels.

VOL+/-: Adjust the volume.

Overview

Back View

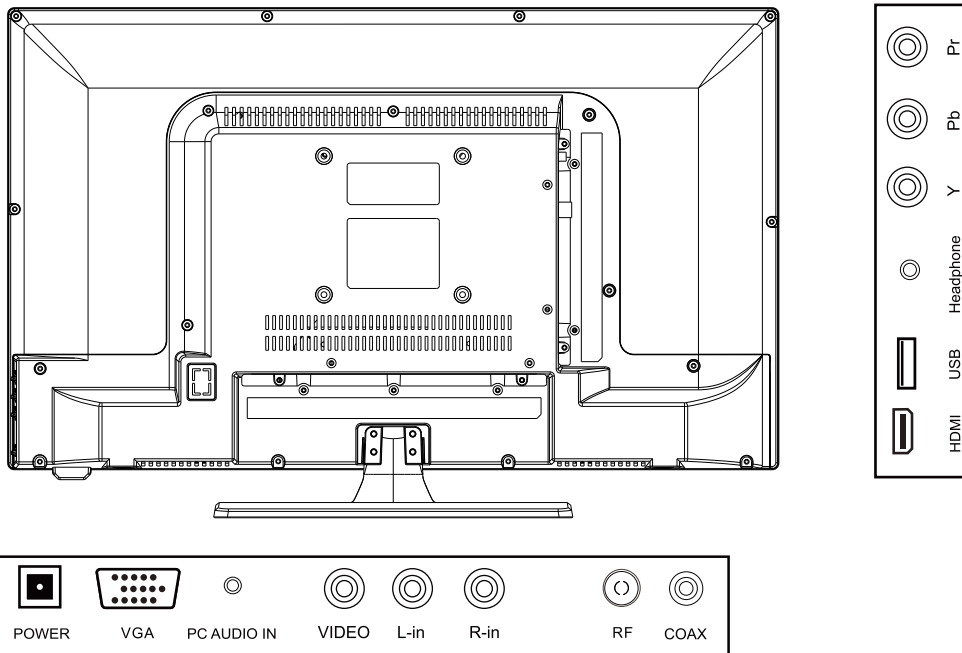

POWER: Connect to the power.

VGA: For PC display. Connect it to the D-Sub 15 pins analog output connector of the PC.

PC AUDIO IN: Connect it to the audio output terminal of PC.

Video: Connect it to video output terminal of DVD.

L/R in: Connect them to audio output terminals of DVD, shared with YPbPr.

RF: Connect antenna or cable 75 Ohm coaxial to receive TV signal.

COAX: Digital output to AV receiver.

HDMI: Connect it to the HDMI of DVD or other equipment.

 
USB: USB jack for Recording and Media.

HEADPHONE: Connect it to your headphone or other audio equipment.

YPBPR: Connect them to the YPbPr video output terminal of DVD.

Accessories

The configuration of the components may look different from the following illustration.

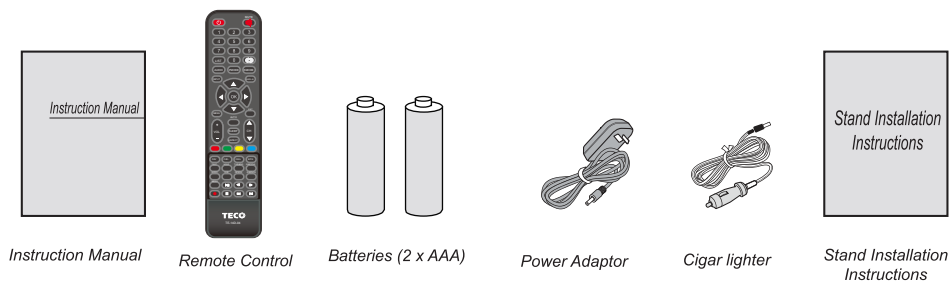

Remote Control

● Functions of remote control buttons

The remote control is using Infra-Red (IR). Point it towards the front of the TV. The remote control may not work correctly if it is operated out of range or out of angle.



 : Turn the TV on/standby.

MUTE: Press to mute the sound, press again or press VOL+ to unmute.

NUMBER BUTTONS

Press 0-9 to select a TV channel directly when you are watching TV.

LIST: Display channel list.



Return to the previous channel viewed.

AUDIO: Change the audio language in DTV mode.

PMODE: Select the picture mode.

SMODE: Select the sound mode.

INPUT: Press to display the input source menu.

DISPLAY: Press to display the current mode's information.

*In DTV mode, play display one time, display the basic information.
Play a second time, display the detail information.
Play a third time to exit.

CURSOR KEYS (▲/▼/◀/▶ / OK)

Allows you to navigate the on-screen menus and adjust the system settings to your preference.

MENU: System setup menu.

EXIT: Exit the OSD menu.

VOL +/-: Adjust the volume.

CH ▲/▼: Scan through channels.

AUTO: Auto adjust in PC mode.

SLEEP: Standby timer.

ASPECT: Change the screen display mode.

Remote Control



FAV: Display the favorite channellist.

FAV+/-: Scan the favourite channel.

EPG: To show the Electronic Program Guide during no-menu state only in DTV mode.

TEXT: Turn the teletext display.

HOLD: Hold or carry on the current subpage.

TV/RADIO: To seitch to TV or radio state in DTV mode.

SUBTITLE: Turn on/o ffthe subtitle display in DTV mode

INDEX: Go to index.

SIZE: Press to see top half of page double size,
Press again to see the bottom
half of page double size. Press again for normal size.

REVEAL: Reveal any hidden text.

SUBPAGE: Press to enter subpages, pressagain to cancel.

Media

▶||: Play/Pause program.

◀◀: Fast reverse.

▶▶: Fast forward.

●: Press to start record the program in DTV mode.

■: Stop program.

◀◀◀: Previous chapter.

▶▶▶: Next chapter.

Basic Operation


Power on/off

- 1.Connect to the power supply with an adaptor.
- 2.-To turn on theTV
Press  button on theremote control or POWER button on the TV.
- To turn off theTV
Press  button on theremote control or POWER button on the TV.

Input Source select

Press **INPUT** on the remote control or on the TV to display the Input source menu.

Input	Description
DTV	Digital TV
ATV	Analogue TV
AV	Video (AV) Input
PC	PC (VGA) + PC Audio Input
Component	Component Video (YPbPr) Input
HDMI	HDMI Input
Media	USB Media Input

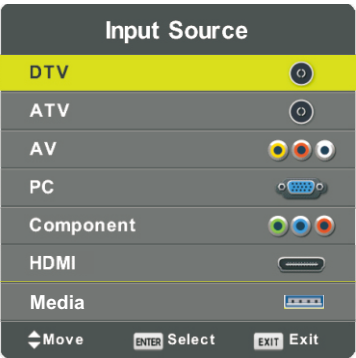 

Use **▲/▼** on the remote control or **CH +/-** on the TV sidebar control to select the input source, press **OK** on the remote control.

Note: Before you select the input source, make sure the connections are prepared.

Basic OSD Menu operation MENUbuttont



- Use **◀/▶** button to select the main menu, and press **OK** button to enter the submenu.
- In the submenu, use **▲/▼** button to select the function item, press **OK** button to enter the setup menu, or press **◀/▶** button to adjust/setup.
- * (Press **MENU** button to return to the upper menu.)
 - * (Press **EXIT** button to exit the menu display.)

OSD Menu

1.CHANNEL Menu



NOTE

Options shown in the Channel Menu /Sub Menu depend on Input mode selection; DTV or ATV.

Auto Tuning

 
Press **OK** button to enter the Tuning Setup menu, and Press **◀/▶** button to select the Tune Type, then press **OK** button, and use **◀/▶** button to select the Country for the TV, then press **OK** button to start auto tuning.

ATV Manual Tuning

Press **OK** button to enter the ATV Manual Tuning menu, and Press **▲/▼** button to select the Search, then Press **◀/▶** button to start searching.

DTV Manual Tuning

Press **OK** button to enter the DTV Manual Tuning menu, select a DTV channel, and press **OK** button to start searching.

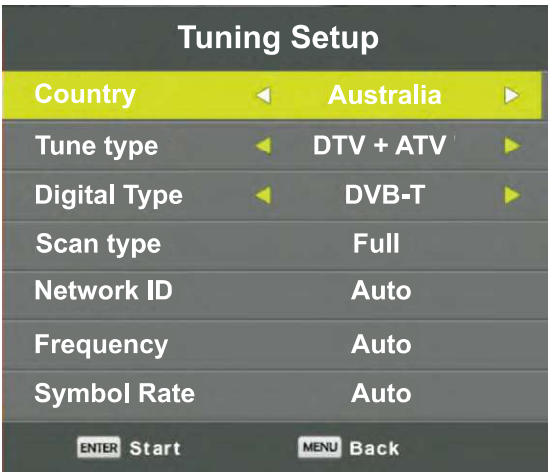

OSD Menu

Programme Edit

Press **OK** button to enter the Programme Edit menu.

 
Delete: Select a channel and press **RED** button, the program will be deleted.

Rename: Select a channel and press **GREEN** button, the program will be renamed .

Move: Select channel, and press **YELLOW** button, then you can use **▲** and **▼** buttons to change the position of the program, press **YELLOW** again to confirm the change. Press menu to exit and it will automatically save the currentset.

Note: Move function only works in DTV or Satellite mode when default country is selected.

Skip: Select a channel and press the **BLUE** button to label the channel, as long as the channel has a skip label it will be skipped when searching through the channels with the CH + / - buttons.

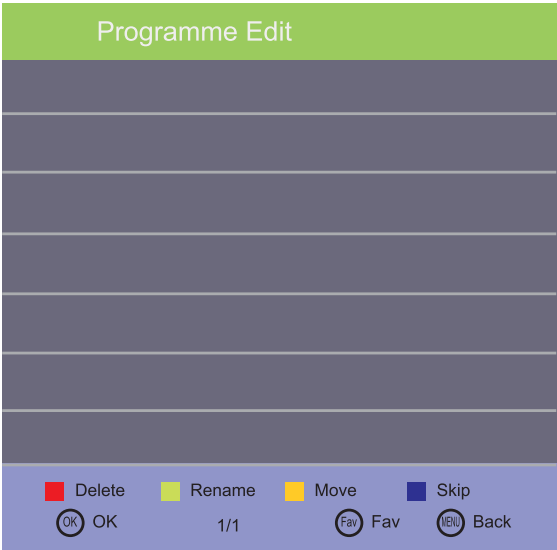

Schedule List

Display the recorder Schedule

 
Note:

- a. Cannot add a schedule which already exists on the list (conflict error);
- b. Cannot add shedules when the list is full, you have to delete some schedules;
- c. You can delete a schedule using **RED** button on the remote control.

Recorded List

The options Recorded List are described on pages 11.

Signal Information: Display the digital TV-signal information.

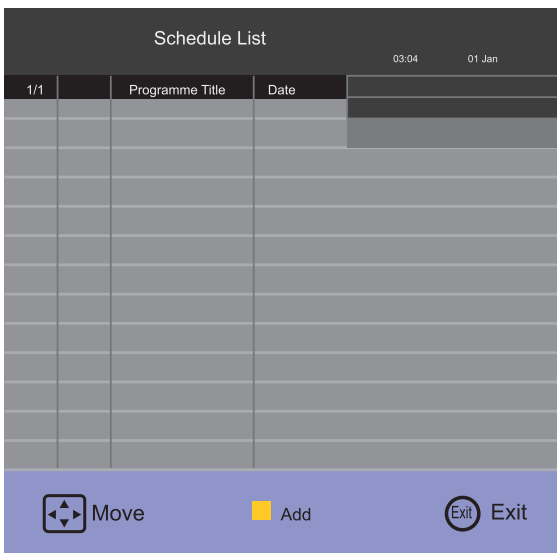

OSD Menu

2. PICTURE Menu

Picture Mode: Choose from Standard, Mild, Personal, and Dynamic.

Note: Contrast, Brightness, Colour and sharpness are only available and can be adjusted in the User mode option in the Picture Mode Settings.

Contrast: Controls the difference between the brightest and darkest regions of the picture.

Brightness: Controls the overall brightness of the picture.

Colour: Control the color.

 
Tint: Controls the tint (NTSC mode only).

Sharpness: Increase this setting to see crisp edges in the picture; decrease it for soft edges.


Colour Temp: Choose from Cold, Normal and Warm.

Noise Reduction: Choose interference noise modes from Off, Low, Medium and High.

HDMI Mode: Available in the HDMI input source.

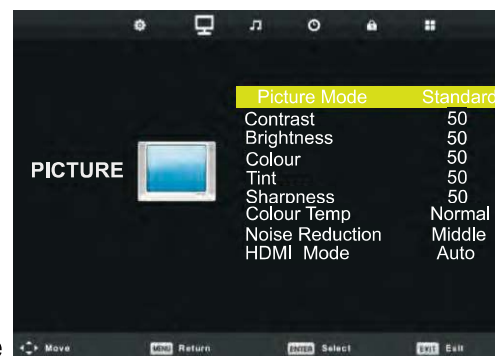

 3. SOUND Menu

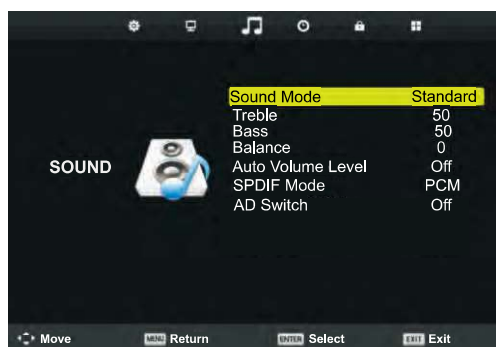

Sound Mode: Allows you to select among: Standard, Music, Movie, Sports and Personal.

Treble (Can be adjusted when the sound mode is Personal): Controls the relative intensity of higher pitched sounds

Bass (Can be adjusted when the sound mode is set to Personal): Controls the relative intensity of lower pitched sounds.

Balance:

To adjust the balance of the left and right sound track, or turn off the volume of the left and right sound track.

Auto Volume: Control the volume of the programme automatically when you turn on the function by selecting "On".

SPDIF MODE: Select the spdif mode.

AD Switch: Control the AD volume when you turn on the function by selecting "On".

OSD Menu

4.TIME Menu

Clock: Display the time.

 
Time Zone: Allows you to select the time zone.

Sleep Timer: Allows you to setup the sleep timer among: 10min, 20min, 30min, 60min, 90min,120min,180min, 240min and off.

Auto Standby:

According to the latest ERP regulation, this unit will switch off itself automatically if no change in status within the last 4 hours of operation.

OSD Timer: Adjust in seconds how long you want to displayed the on-screen menu. Select between 5, 10, 15, 20, 25, 30 or Never.

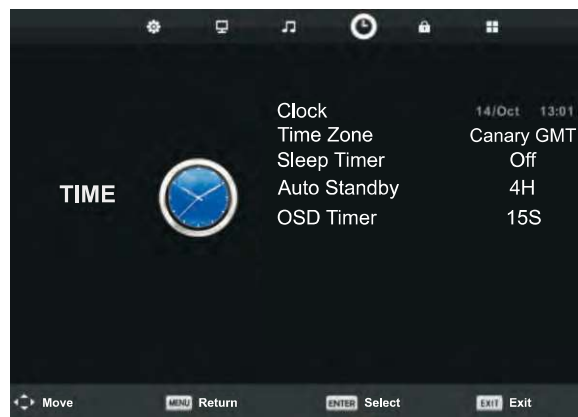

5.LOCK Menu

System Lock: Select ON to enable the password lock. The default password is 0000.

Set Password: Change the default password. First enter the current password, then a new one. This must be repeated again.

Channel Lock: Select the channels you want to lock.

Parental Guidance: Allows you to select the Parental Guidance mode.

Key Lock: Lock the buttons on the TV set when you turn on the function

Hotel Mode: Enter the Hotel Setting menu (see below).



Hotel Menu (on)

Source Lock: Disable the input source you desired.

Default Source: Select the default source when you turn on the TV.

Default Prog: Select the default programme when turn on the TV.

 
Default Volume: Set the default volume when the program is on.

Max Volume: Set the Max volume for the TV.

Import Database: Import all Hotel Settings from the USB device.

Export Database : Export all Hotel Settings to the USB device.

Clear Lock: Clear all the locks above, it means set all the locks to OFF and max volume to 100.

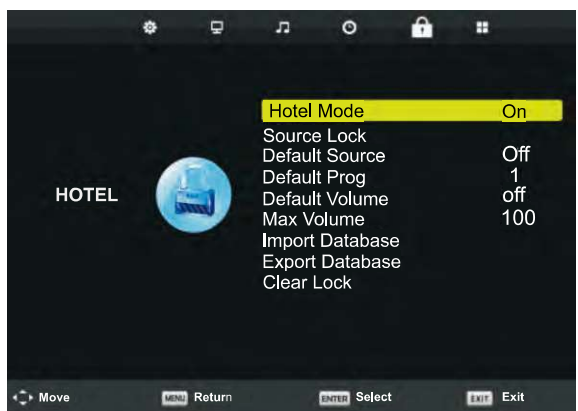

OSD Menu

6.SETUP Menu

Language: Allows you to select menu language.

TT Language: Setting the character set for teletext.

Audio Language (can be selected in DTV mode): Allows you to select first and second audio language.

Subtitle Language (can be selected in DTV mode): Allows you to select first and second subtitle language.

Hearing Impaired: Allows you to select hearing impaired.

PVR File System: Setup the PVR file system.

Aspect Ratio: Setting for the aspect ratio (16: 9, 4: 3, Auto)

Blue Screen: Changes the background when there is no input between clear and a blue background.

Filst Time Installation: Display the First Time Installation menu.

Reset: If the factory settings of the device restores. In this process, you will lose all settings of the device.

Software Update(USB): Starts the software update via a USB storage.

HDMI CEC

Press ▼ / ▲ button to select HDMI CEC, then press **Enter** button to enter the sub-menu.

HDMI CEC:Press ◀ / ▶ button to turn the HDMI CEC On or Off.

HDMI ARC:Press ◀ / ▶ button to turn the HDMI ARC On or Off.

Auto Standby:Press ◀ / ▶ button to turn the Auto Standby On or Off.

Device List:Press **Enter** button to open the main menu of device.



Multimedia Operation

An optional external USB Drive can be connected to view multimedia content.

 
 
Basic Operation

1). Press the **INPUT** button on the remote control to display the input source menu, select Media source by the ◀/▶ buttons, and press **OK** button to enter the Multimedia menu seen below.



2). Select the file type (mains menu) you want to view, and insert USB device, you will find the name of the device display on the screen.


3). Press ◀/▶ button to select the the USB device, and press OK button to enter.

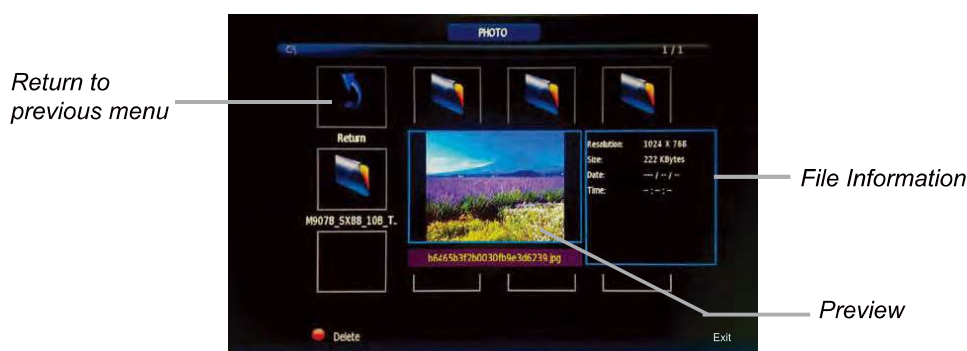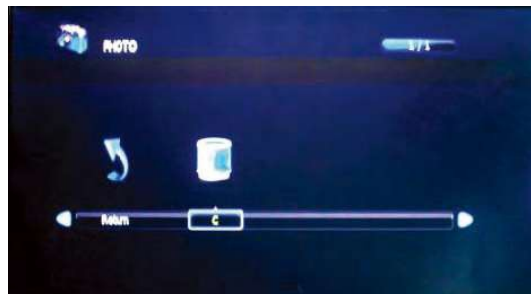

Press ◀ / ▶ / ▲ / ▼ buttons to select and the **OK** button to activate the file or open folder. Press **OK** / ►| button to play the files in full screen mode. When in full screen mode press the **OK** button to show the option menu on the bottom of the screen or press ■ stop button to return to files. Note: You can press **RED** button on the file to delete the file.

Multimedia Operation

 1. Photo

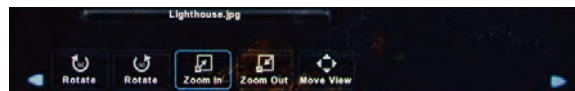

Press ◀/▶ button to select the option on the menu, and press **OK** button to change.

Pause: Play/pause the photo view.

Prev./Next: View the previous/next photo.

Stop: Stop the photo view.

Repeat: Select the repeat mode from Repeat All, Repeat 1, Repeat None.

Music Off: Play/pause the music program (you can only play or pause the music you have programed).

Playlist: Display the playlist on the screen, and you can select the photo by ▲/▼ button, and press **OK** button to program. Press ◀/▶ button to return to the options table.

 
Info: Display the information of the photo.

Rotate: Rotate the photo clockwise/counterclockwise.

Zoom Out/In: Zoom out/in the photo.

Move View: Move the photo in Zoom in mode.

2. Music

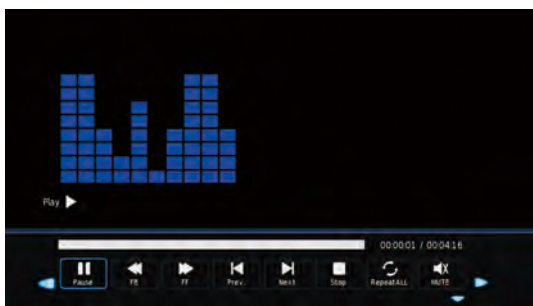

Press ◀/▶ button to select the option on the menu, and press **OK** button to change.

Pause: Play/pause the music.**FB/FF:** Fast backward/fast forward.**Prev./Next:** Play the previous/next file.**Stop:** Stop the music.

Repeat: Select the repeat mode from Repeat All, Repeat 1, Repeat None.

Mute: Mute the sound.

Playlist: Display the playlist on the screen and play the file by ▲/▼ button and OK button, you can press ▶ button to select “CANCEL”, and press OK button to cancel the list displaying or press the “list” button.

Goto Time: Play the music from the time you set.

Multimedia Operation

3. Movie

Press ◀/▶ button to select the option on the menu, and press **OK** button to change.

Pause: Play/pause the music

 
FB/FF: Fast backward/fast forward.

Prev./Next: Play the previous/next file.

Stop: Stop the movie.

Char Set: such as Western

Europe(Windows).Select a switable character libraly of the subtitle of the movie that you view

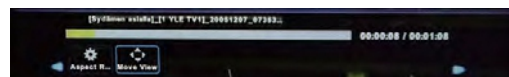

Repeat: Select the repeat mode from Repeat All, Repeat 1, Repeat None.

Set A-B: Select and play the preferable part of the file by setting A and B at the beginning and end. Press **OK** button to cancel.

Playlist: Display the playlist on the screen.

Info: Display the information of the movie.

Slow : Play the movies at slow speed, press ▶ button to cancel.

Step : Step quickly through the movie by using this option

Goto Time: Program the movie form the time you set.

Zoom out/in: Zoom out/in the movie screen.

Aspect Ratio: Select the aspect ratio of the screen display.

Move View: Move the photo in Zoom in mode.

4. Text

Press ◀/▶ button to select the option on the menu, and press **OK** button to change.

Previous/Next page: Turn to previous/next page of the text.

Prev./Next: Turn to previous/next file.

 
Stop: Stop auto turning pages.

Char Set: Select a switable character libraly of corrent Text file that you view,such as Western Europe (Windows).

Music: Play/pause the music programme.

Playlist: Display the playlist on the screen.


Info: Display the information of the text.

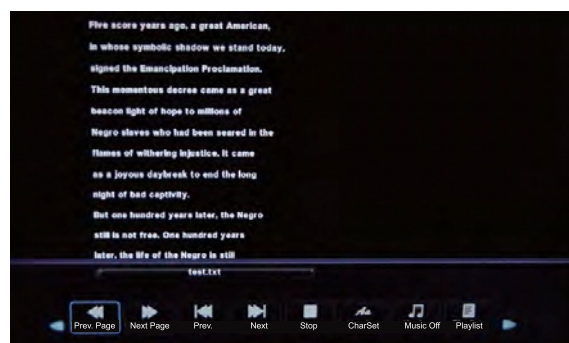

Recording Operation

PVR settings

 Press the **MENU** button, select SETUP menu, and select “PVR File System”, then press **OK** button to enter the setting menu.

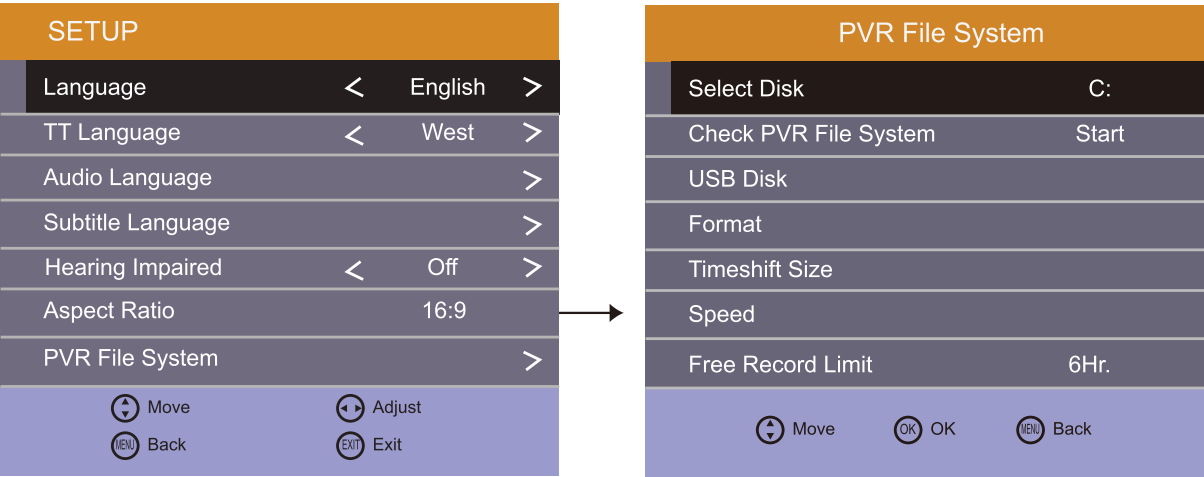

Please check whether your USB device works or not before recording.

Setup the PVR File system before you start recording.

Select Disk: Select the device for the Record files.

Check PVR File System: Check the system.

USB Disk: Display the USB state.

Format: Format the USB device for PVR operating.

TimeShift Size: Display the size of the USB device (The device has been formatted).

Speed: Display the speed of the USB device (The device has been formatted).

Troubleshooting

- Do not use other functions that are not mentioned in this instruction manual.
- In case a problem occurs with your TV, please take the following steps first.
- If you still have the problem, turn the power off and contact TECO service on 1300 660 037.

Issue	Action
No power	* Check the indicator light. (Red is STANDBY. Green or Blue is ON). If light is OFF, switch ON the power from the outlet and/or the power switch at the back of the TV. * Make sure the TV and the power cord are connected correctly. * Plug in another device to the outlet and make sure there is power coming from the outlet. * Press POWER on the remote control or on the side panel.
Power cut off automatically	* Check if the TIMER or SLEEP TIMER is set ON. * TV temperature may increased. Remove any objects/dust blocking the vents.
Remote Control does not operate	* Check if Main Power is On. * Change the batteries and make sure batteries are inserted correctly. * Make sure that you do not use the remote control under strong lighting. * Make sure the remote control aim to the remote control sensor directly within 7 meter from the TV.
No signal	* Check the cables and connections. Make sure they are connected correctly and securely fastened. * Turn ON the device (e.g. DVD player) that you are trying to view, and, if needed, start play. * Press SOURCE on the remote control or on the side panel, and select the correct input source. * Test the input port with other device and connect the device on other input port.
Poor picture quality	* Check the cables and connections. Make sure they are connected correctly and securely fastened. * Check the condition and length of the cables. Cables that have been bent or pinched may also cause picture quality problems. Replace the cable or try a different cable type. * Press the CH button to display a different channel. Picture quality problems on a single channel or on all channels may be caused by the TV station signal (antenna) or the cable signal source. Rescan the channel. Contact experienced antenna installer to check the antenna if needed. * Adjust the Picture setting (Picture Mode, Contrast, Brightness, Colour etc.) in the Menu. * Check the video setting on the external device.
No sound	* Check if the Mute function is ON. Press Mute, or the Vol+ to turn off mute. * Is the volume too low? Press the Vol+ button. * Check the cables and connections. Make sure they are connected correctly and securely fastened. * Check the audio setting on the external device.

Specifications

LCD Panel	Panel Size	18.5"	22"
	Aspect ratio	16:9	16:9
Max. Resolution		1366x768	1920x1080
Input Connector	VIDEO	1	
	YPbPr	1	
	VGA	1	
	AUDIO (L/R)	1	
	PC AUDIO	1	
	HDMI	1	
	RF	1	
	USB	1	
Output Connector	HEADPHONE	1	
	COAX	1	
Main Voltage		12V = 3A	12V = 3A
Power		36W	36W
Mounting Bracket (VESA)		100 x 100mm	100 x 100mm
Mounting Screw Size		M4	M4

Note: Specifications are subject to change without prior notice.

Did you know?

TECO Australia's product range also includes:

- Top Load Clothes Washers
- Front Load Clothes Washers
- Auto Sensing Vented Clothes Dryers
- Refrigerators
- Chest and Vertical Freezers
- Bar Fridges
- Televisions
- Air Curtains and Air Conditioners

Visit **www.teco.com.au** for our full range.

REPAIRS, SERVICE & WARRANTY

It is hazardous for anyone installing, removing, altering, repairing, servicing or testing of this appliance.

Only an Authorised Service Person can carry out servicing or repairs to this appliance.

IF SERVICE IS REQUIRED:

If you have a problem, and the problem persists after you have made the checks mentioned in this manual, contact:

TECO Australia's Service on 1300 660 037 (8:30am - 4pm Mon~Fri AEST)

For warranty details please visit www.teco.com.au

Service Email : had.service@teco.com.au

Spare Parts : had.parts@teco.com.au



WARRANTY INFORMATION

Teco's warranty information for the product purchased is available at www.teco.com.au.

A copy of the warranty may also be obtained by contacting Teco's Warranty and Service Department on 1300 660 037 during business hours (Mon - Fri 8.30am – 4pm AEST).

To arrange for servicing of a Teco product, please contact our Warranty and Service Department on 1300 660 037 during business hours (Mon - Fri 8.30am – 4pm AEST).

To assist in processing any warranty claim that you may have Teco recommends that you:

1. Complete the following information in relation to your purchase:

Name of retailer: _____

Name of owner: _____

Date of purchase: _____

Model No. : _____

Serial No. : _____

MFG code: _____

2. Retain proof of your purchase for any warranty claim. Ideally this proof of purchase will be the tax invoice issued for your purchase.

3. Complete the following information in relation to the person that installed your Teco appliance (if applicable):

Installer's name: _____

Telephone No.: _____

Licence No.: _____